

Omni 128L

IDSL Modem

Quick Start Guide

Table of Contents

1. Installation	1-1
Front Panel Description	1-1
Back Panel Description and Connections	1-3
Power On and Self Diagnostics	1-4
2. Install Windows 95/98/NT Driver (INF file)	2-1
Customer Support	

1. Installation

Thank you for choosing the ZyXEL Omni 128L IDSL modem. This section is designed to guide you through a quick, easy installation of your new Omni 128L.

The following graphics display the Omni 128L front and rear panels. All installation steps below apply to the Omni 128L.

Front Panel Description

Front Panel LEDs

LED	Function	Active	Description
PWR	Power LED	On	When the power is turned ON.
LNK	Link LED	On	When the link with the local ISDN switch is active.
		Blinking	When attempting to make a connection.
64K	B1 Channel	On	When the 64K link is established.
128K	B2 Channel	On	When the 128K link is established.
DTR	Data Terminal Ready	On	When the DTE or computer connected to the DTE port signals that it is ready for communication by establishing an RS-232 link.
DSR	Data Set Ready	On	When the modem is ready for communication with the DTE.
RTS	Request To Send	On	When the DTE has data to be sent to the remote modem. The RTS signal is used in Hardware Handshaking.
СТЅ	Clear To Send	On	When the modem is ready to receive data from the remote modem. The CTS signal is used in Hardware Handshaking.
тх	Transmit Data	Blinking	When the DTE/Computer transmits data to the DTE port.
RX	Receive Data	On	When the DTE/Computer receives data from the DTE port.

Back Panel Description and Connections



Back Panel Switch and Connectors

ON/OFF	Turn the Omni 128L on or off using this switch.
POWER	Input terminal for power adapter.
DTE	Serial port DB-25 female connector for connection to the serial port of a DTE device such as a computer.
IDSL	IDSL RJ-45 terminal jack; connects to an IDSL interface.

Power On and Self Diagnostics

Once you have completed all of the installation steps above, flip the On/Off switch to the ON (up) position. The unit starts a self-test sequence, when you should see a series of LEDs blinking (LED, 64K, 128K). After this cycle is complete, the PWR light should stay on.

If the test routine fails, the LNK LED flashes.

If you have a communication program loaded and active (connected to the same serial port as the Omni 128L), you should see the **DTR** LED ON after the self-test.

2. Install Windows 95/98/NT Driver (INF file)

As a windows 95/98/NT user, to successfully use the ZyXEL Omni 128L IDSL modem, you have to install INF files to setup your modem first.

If your computer supports Plug & Play, be sure your modem is powered on before starting your computer. If you are using a non-Plug & Play protocol, follow the steps below to perform the installation:

Step 1. Double-click on the Modems icon in the Windows 95/98/NT Control Panel folder. Then click the Add button.



Step 2. Select "Don't detect my modem; I will select it from a list." Then, click Next to continue.

Install New Modem		
	Windows will now try to detect your modem. Before continuing, you should:	
	 If the modem is attached to your computer, make sure it is turned on. 	
	Quit any programs that may be using the modem.	
	Click Next when you are ready to continue.	1. Select this checkbox.
1	Don't detect my modem; I will select it from a list;	
		2. Click Next to continue.
	(Back Next) Cancel	
x	Cares	

Step 3. Click Have Disk, then follow the instructions in the following illustrations:

Install New Modem		
Click the manufacture or if you have an insta	r and model of your modem. If your modem is not listed, Ilation disk, click Have Disk.	
Manufacturers: (Standard) (VoiceView Modem Types) Acer Angia Anev Data Inc	Models Standard 300 bps Modem Standard 1200 bps Modem Standard 2400 bps Modem Standard 9600 bps Modem Standard 14400 bps Modem Standard 19200 bps Modem Standard 19200 bps Modem Standard 28800 bps Modem Lave Disk	1. Click here to continue.
	< <u>B</u> ack Next > Cancel	

2.Make sure the installation disk is in your floppy.

Install Fr	om Disk	×	
9	Insert the manufacturer's installation disk into the drive selected, and then click OK.	OK Cancel	
	Copy manufacturer's files from:	Browse	3. Use Browse to find the location of the updated INF file.

Dri <u>v</u> es:	
🖃 с:	-
💻 a:	
🔳 c:	100
🖾 d:	
📼 f:	
📼 g:	-

4. Select your floppy drive (here it is A:), then you will see the next display.

)pen		? ×
File <u>n</u> ame:	<u>F</u> olders:	ОК
Mdmzv9ei.inf	a:\inf	
Mdmzv9ei.inf	🔺 🦳 a:	Cancel
Mdmzyxei.inf Mdmzyxod.inf mdmzyxol.inf Mdmzyxom.inf	inf	Network
Mdmzyxon.inf Mdmzyxop.inf mdmzyxot.inf		×
	Dri <u>v</u> es:	
) 🗃 a:	

5. Select the inf folder, and a list of INF files will appear in the left column.

(For Windows NT users, please select the winnt folder)

6. *Don't make any selection here.* Click **OK** to go to the next screen.

Step 4. Click OK to install INF files from your installation disk .



Step 5. Use the scroll bar to locate the model name of your ZyXEL device, then click once on the new device "ZyXEL Omni 128L."



Step 6. Select the COM port to which your Omni 128L is connected.



Step 7. Wait for the installation to complete.

Install New Modem		
	Please wait while Windows installs your modem.	Please wait
	<u>Back</u> Next> Cancel	

Step 8. Click Finish to complete INF files installation.





Step 9. Click Close to end the INF files installation.

Modems Properties		
General Diagnostics Image: Second state of the following modems are set up on this computer: Image: Second state of the following modems are set up on this computer: Image: Second state of the following modems are set up on this computer: Image: Second state of the following modems are set up on this computer: Image: Second state of the following modems are set up on this computer: Image: Second state of the following modems are set up on this computer: Image: Second state of the following modems are set up on this computer: Image: Second state of the following modems are set up on this computer: Image: Second state of the following modems are set up on this computer: Image: Second state of the following modems are set up on this computer: Image: Second state of the following modems are set up on this computer: Image: Second state of the following modems are set up on the following modems are s		The ZyXEL Omni 128L has been successfully installed on your PC.
Add Remove Properties Dialing Preferences Dialing from: Default Location Use Dialing Properties to modify how your calls are dialed. Dialing Properties Dialing Properties Close	/	Click Close to end the INF files installation.

Customer Support

ZyXEL IDSL Modem

If you have any questions about your ZyXEL product or desire customer assistance, contact ZyXEL in one of the following ways.

Contact ZyXEL

Method	E-MAIL – Support	Telephone	Web Site	Regular Mail
Location	– Sales	Fax	FTP Site	
Worldwide	support@zyxel.com.tw	+886-3-578-3942	www.zyxel.com	ZyXEL Communications Corp
	support@europe.zyxei.com		www.europe.zyxei.com	6 Innovation Road II,
	sales@zyxel.com.tw	+886-3-578-2439	ftp.europe.zyxel.com	Science-Based Industrial Park, HsinChu, Taiwan.
North America	support@zyxel.com	+1-714-632-0882 800-255-4101	www.zyxel.com	ZyXEL Communications Inc.,
	sales@zyxel.com	+1-714-632-0858	ftp.zyxel.com	1650 Miraloma Avenue, Placentia, CA 92870, U.S.A.
Scandinavia	support@zyxel.dk	+45-3955-0700	www.zyxel.dk	ZyXEL Communications A/S
	sales@zyxel.dk	+45-3955-0707	<u>ftp.zyxel.dk</u>	Columbusvej 5, 2860 Soeborg, Denmark.
Austria	support@zyxel.at	+43-1-4948677-0	www.zyxel.at	ZyXEL Communications
	sales@zyxel.at	+43-1-4948678		Services GmbH.
				125a/2/2/4
Germany	support@zvxel.de		www.zvxel.de	A-1160 Vienna, Austria ZvXEL Deutschland
Connuny		49-2405-6909-0	<u></u>	GmbH.
	<u>sales@zyxel.de</u>	49-2405-6909-99		Adenauerstr. 20/A4 D-52146 Wuerselen
				Germany.

Omni 128L Quick Start Guide

Create a Dial-up Connection

Now you only have one step away to access Internet. Follow the instructions below to create a new Dial-up Connection.

- Step 1. Click on My Computer of your desktop, select Dial-up Network, then click on Add New Dial-up Connection.
- **Step 2.** Give a name to this Dial-up Connection; for example, Omni 128L IDSL modem. Then select your Omni 128L as the device to connect to Internet, then click **Next**.

Make New Connection	
	Type a name for the computer you are dialing: Omni 128L IDSL Modem Select a modem: Image: Omni 128L Image: Omni 128L Image: Omni 128L
	<u> </u>

Step 3. Enter the default phone number "912", then click Next.

Make New Connection	
	Type the phone number for the computer you want to call: Area code: Ielephone number: Country code: Taiwan, Republic of China (886)
	< <u>B</u> ack <u>N</u> ext > Cancel

Step 4. Click Finish.

From now on, you can access Internet by your new IDSL modem.